




ASSEMBLY INSTRUCTION MODEL #6006-SA

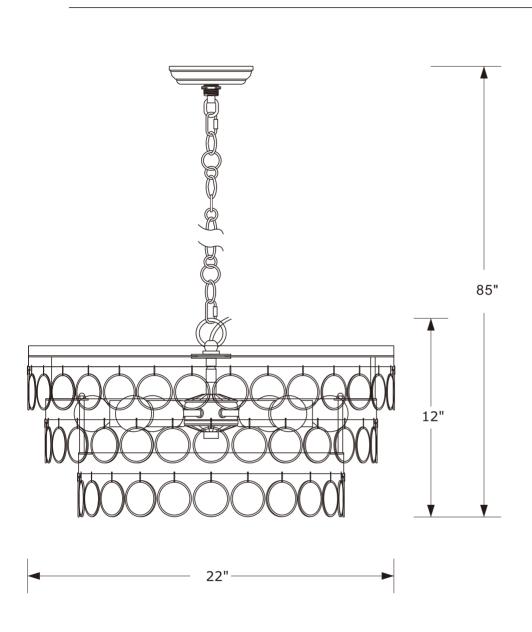



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate

 $local\ electrical\ codes.$





You will need 6-Medium Bulb
60 Watts Recommended 100 Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS DAMP RATED.

How to Install

- 1 .Put the lower frame onto the upper frame by inserting the threaded rods into the holes and secure with ball nuts.
- 2.Insert recommended bulbs (not included).
- 3.Dress up the shells.


Capiz Shell Sets

A. 79 Pieces.





PART NUMBER MODEL #6006-SA

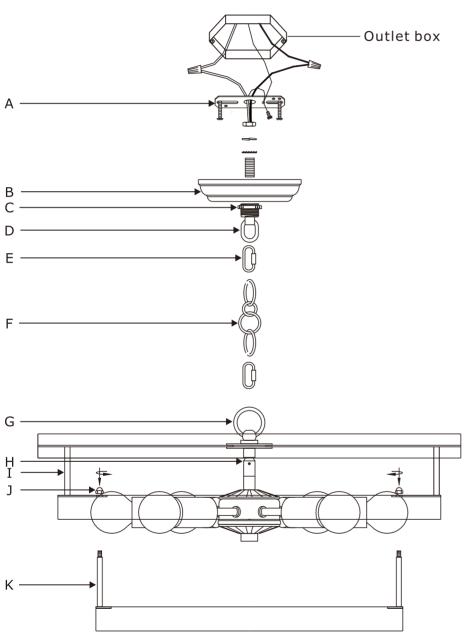

Part Number

- A. (1) Mounting Hardware
- B. (1) Canopy(W5.12",H1.06") #XRE6006SACAN5.12IN
- C. (1) Collar Ring
- D. (1) Collar Loop
- E. (2) Quick Link
- F. (1) Hanging Chain(72",4mm) #XRE6006SACHA4MM
- G. (1) Fixture Loop
- H. (1) Swivel
- I. (1) Upper Frame
- J. (3) Ball Nut
- K. (1) Lower Frame