

CRYSTORAMA LIGHTING



Crystorama.com

ASSEMBLY INSTRUCTION MODEL #8116-PN

WARNING




Electrical Danger



Turn Power Off


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 6-Candelabra Bulb
60 watts Max Bulb not included
USE LED BULBS FOR EXTENDED USE
This fixture is DRY rated

How to Install

1. Insert the shade spoke in between top and bottom knurled nut.
2. Secure the shade by twisting the top knurled nut.
3. Install the recommended bulbs into each socket.
4. Screw the crystal ball into the bottom box.

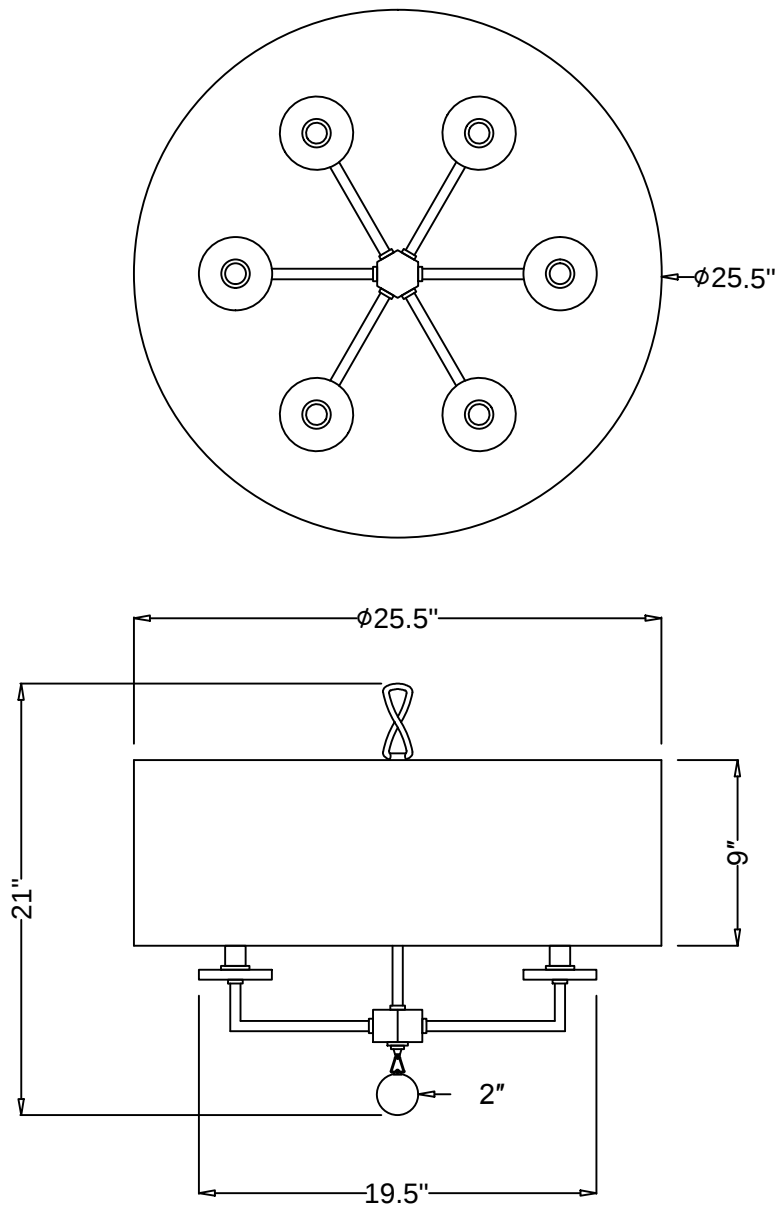

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA LIGHTING



Crystorama.com

PART NUMBER MODEL #8116-PN

Part Number

Part Numbers

A. Mounting Hardware

(1) Mounting Plate

(2) Mounting Screws

(3) Wire Nut

B. (1) Canopy; $\phi 5 \times 0.75$ "h; XMO8116PNCAN5IN

C. (1) Chain; 72"L x $\phi 4.0$ mmT; XMO8116PNCHA5MM

D. (1) Fixture Loop

E. (2) Knurled Nut

F. (1) Fabric Shade; $\phi 25.6 \times 9$ "h; XMO8116SHA25.6IN

G. (6) Socket

H. (6) Crystal bobèche

I. (1) Crystal ball

