


CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

ASSEMBLY INSTRUCTION MODEL # DAN-406-VG

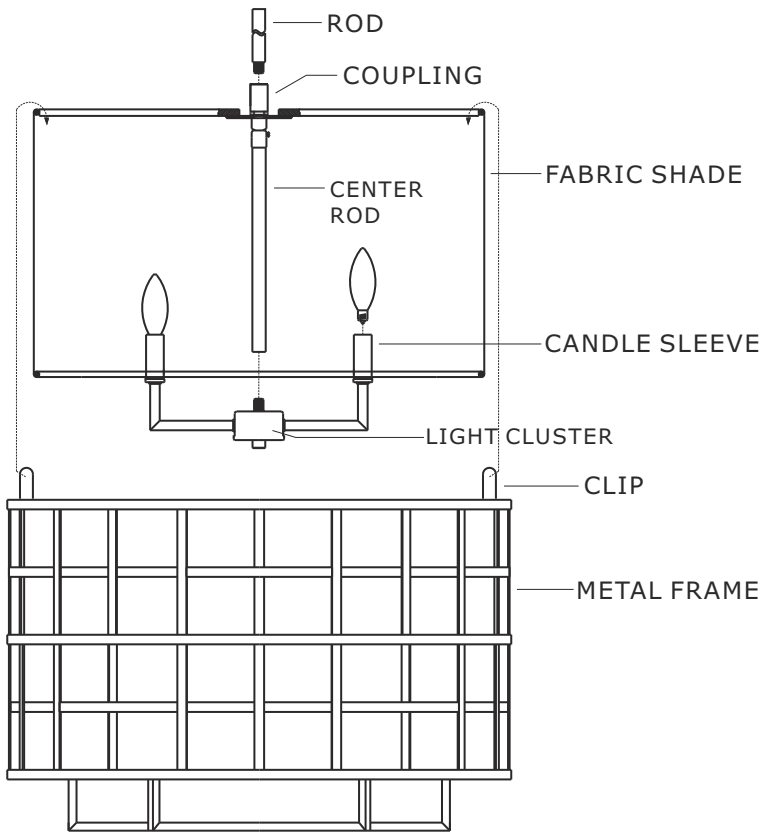

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 6- Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
This fixture is Dry rated

How to install

1. Slip the center rod assembly along wire and thread onto the nipple located on the top of the light cluster.
2. Slide the fabric shade inside the metal frame and secure it with clips.

NOTE: HIDE THE SEAMS OF THE SHADE BY ALIGNING IT WITH A VERTICAL METAL BAR.

3. Determine the preferred hanging height and adjust the required rods.
4. Feed the wires through the rods and connect them together.
5. Slip canopy kit along wire and thread it into the top of the rod assembly.
6. Install the mounting screws into the matching holes in the mounting bar. Secure the mounting bar to the outlet box with the outlet box screws.
7. Raise canopy allowing the mounting screws to protrude through the holes in the canopy, and secure with the ball nut.
8. Install the bulbs(not included) into the socket.

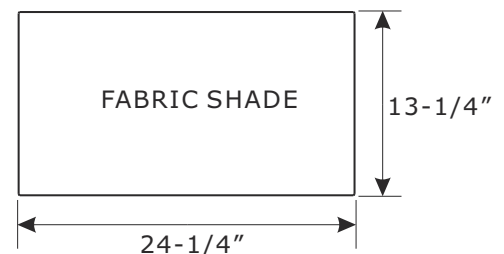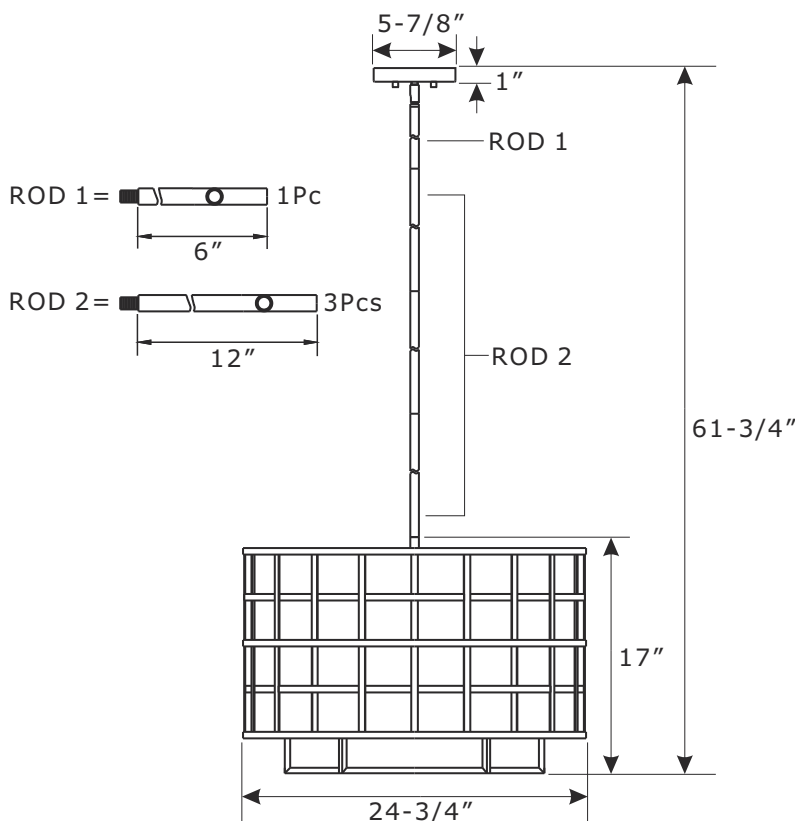

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov



ASSEMBLY INSTRUCTION MODEL#DAN-406-VG

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy kit W5-7/8"xH1" #XRF404VGCAN5.875IN
- C. (2)-Ball nut #XRF400VGBANUT
- D. (1)-Rod D5/8"xL6" #XRF404VGROD6IN
- E. (3)-Rod D5/8"xL12" #XRF404VGROD12IN
- F. (1)-Center rod W1/2"xL9-1/4" #XRF406VGSTEM9.25IN
- G. (1)-Fabric shade W24-1/4"xH13-1/4" #XRF406SHA24.25IN
- H. (6)-Candle sleeve W7/8"xL2-3/8"
- I. (1)-Metal frame

