




LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #DUM-9804-GE

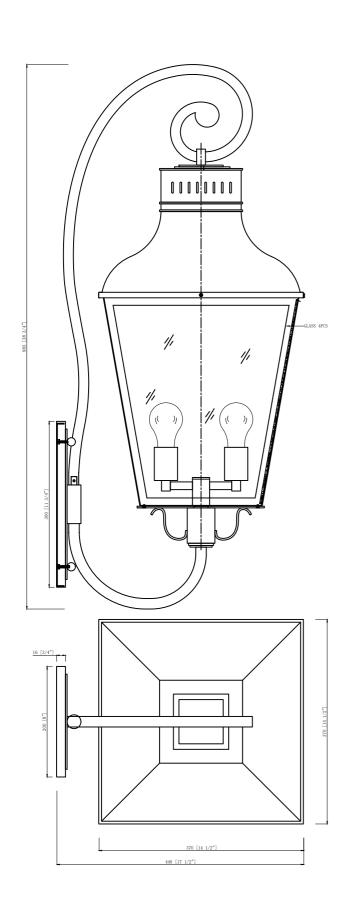



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 4 - Med. Bulb 40 Watts Recommended 60 Watts Max

USE LED BULBS FOR EXTENDED USE


THIS FIXTURE IS WET RATED

How to Install

- Remove the top cage by loosening the cap nuts and install the bulb
- Insert the glass into the bottom cage and secure with the clip.
- Place the top cage over the bottom cage while inserting the bottom end of the top arm onto the stud. Secure the top cage with the cap
- Place the mounting plate over the outlet box and mark 4 points on the wall surface at the center of the 4 holes on the mounting plate. Drill 4 holes at the marked points and insert the wall anchors.
- Attach the mounting plate over the outlet box using two outlet box screws. Insert the anchor screws into the wall anchors to tighten it.
- Install the bulb onto socket.
- Put the top cage back by inserting the top arm end onto the stud on the lower arm. Secure the top cage with the cap nuts.

- How to change bulb

 1. Remove the screw on the bottom of the bottom cage.
- Lift the top cage up and change the bulb.
- Put the top cage back and secure with the screws.

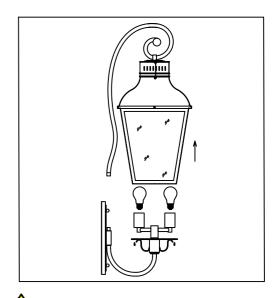


WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov





LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #DUM-9804-GE

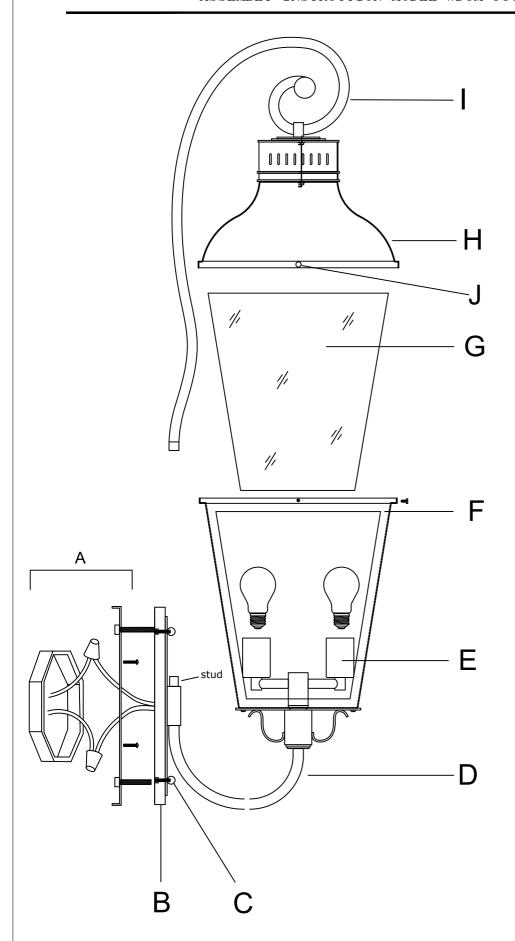

Part Numbers

Part Numbers

- A.Mounting Hardware
 - (3)Wire Nut
 - (1)Mounting Plate
 - (1)Green Ground Screw
 - (4)Anchor screw
 - (4)Wall anchor
- B.(1)Back plate;11.75"x8"x0.75H; XAR9803GEBKP11.75IN
- C.(4)Ball nut; XAR9801GEBANUT
- D.(1)Bottom arm
- E.(1)Light cluster
- F.(1)Bottom cage
- G.(4)Glass; W13.5"+W8.25"*14.75H" XAR9804GEGLA14.75IN
- H.(1)Top cage
- I. (1)Top scroll arm
- J. (4)Cap nuts