



CRYSTORAMA LIGHTING

ASSEMBLY INSTRUCTION MODEL# DAV-6005-MG

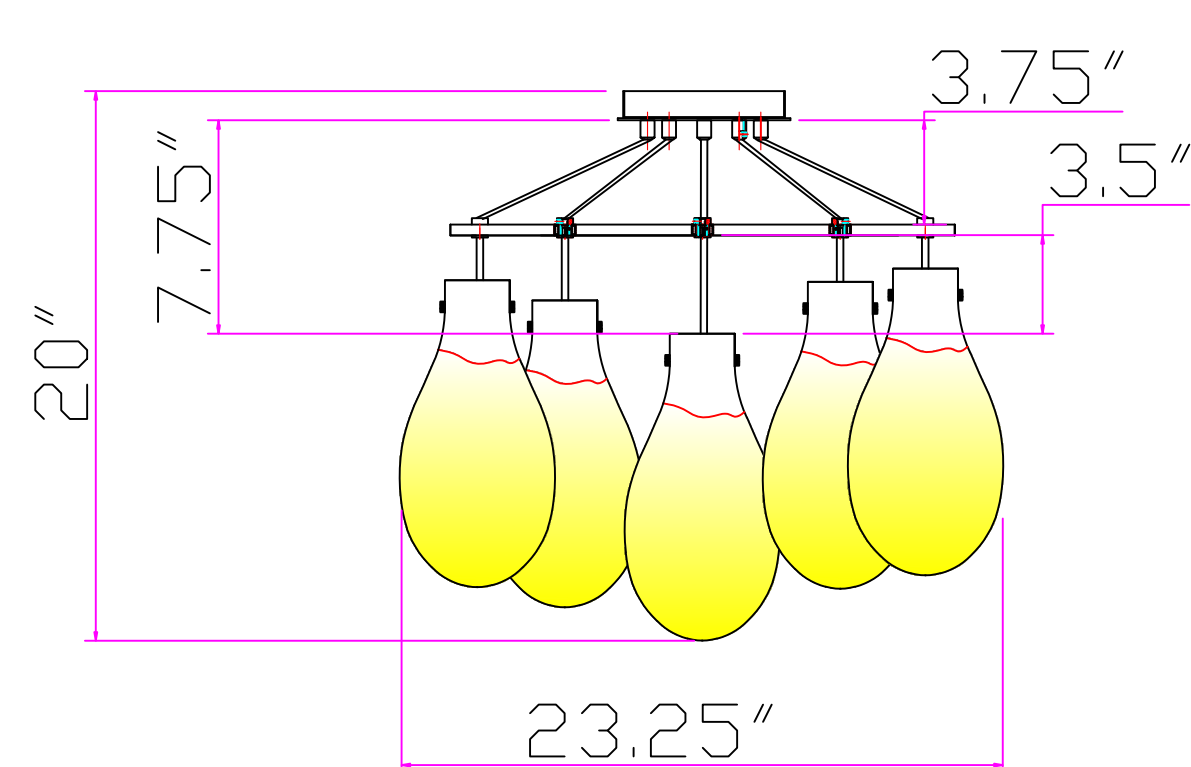

Crystorama.com

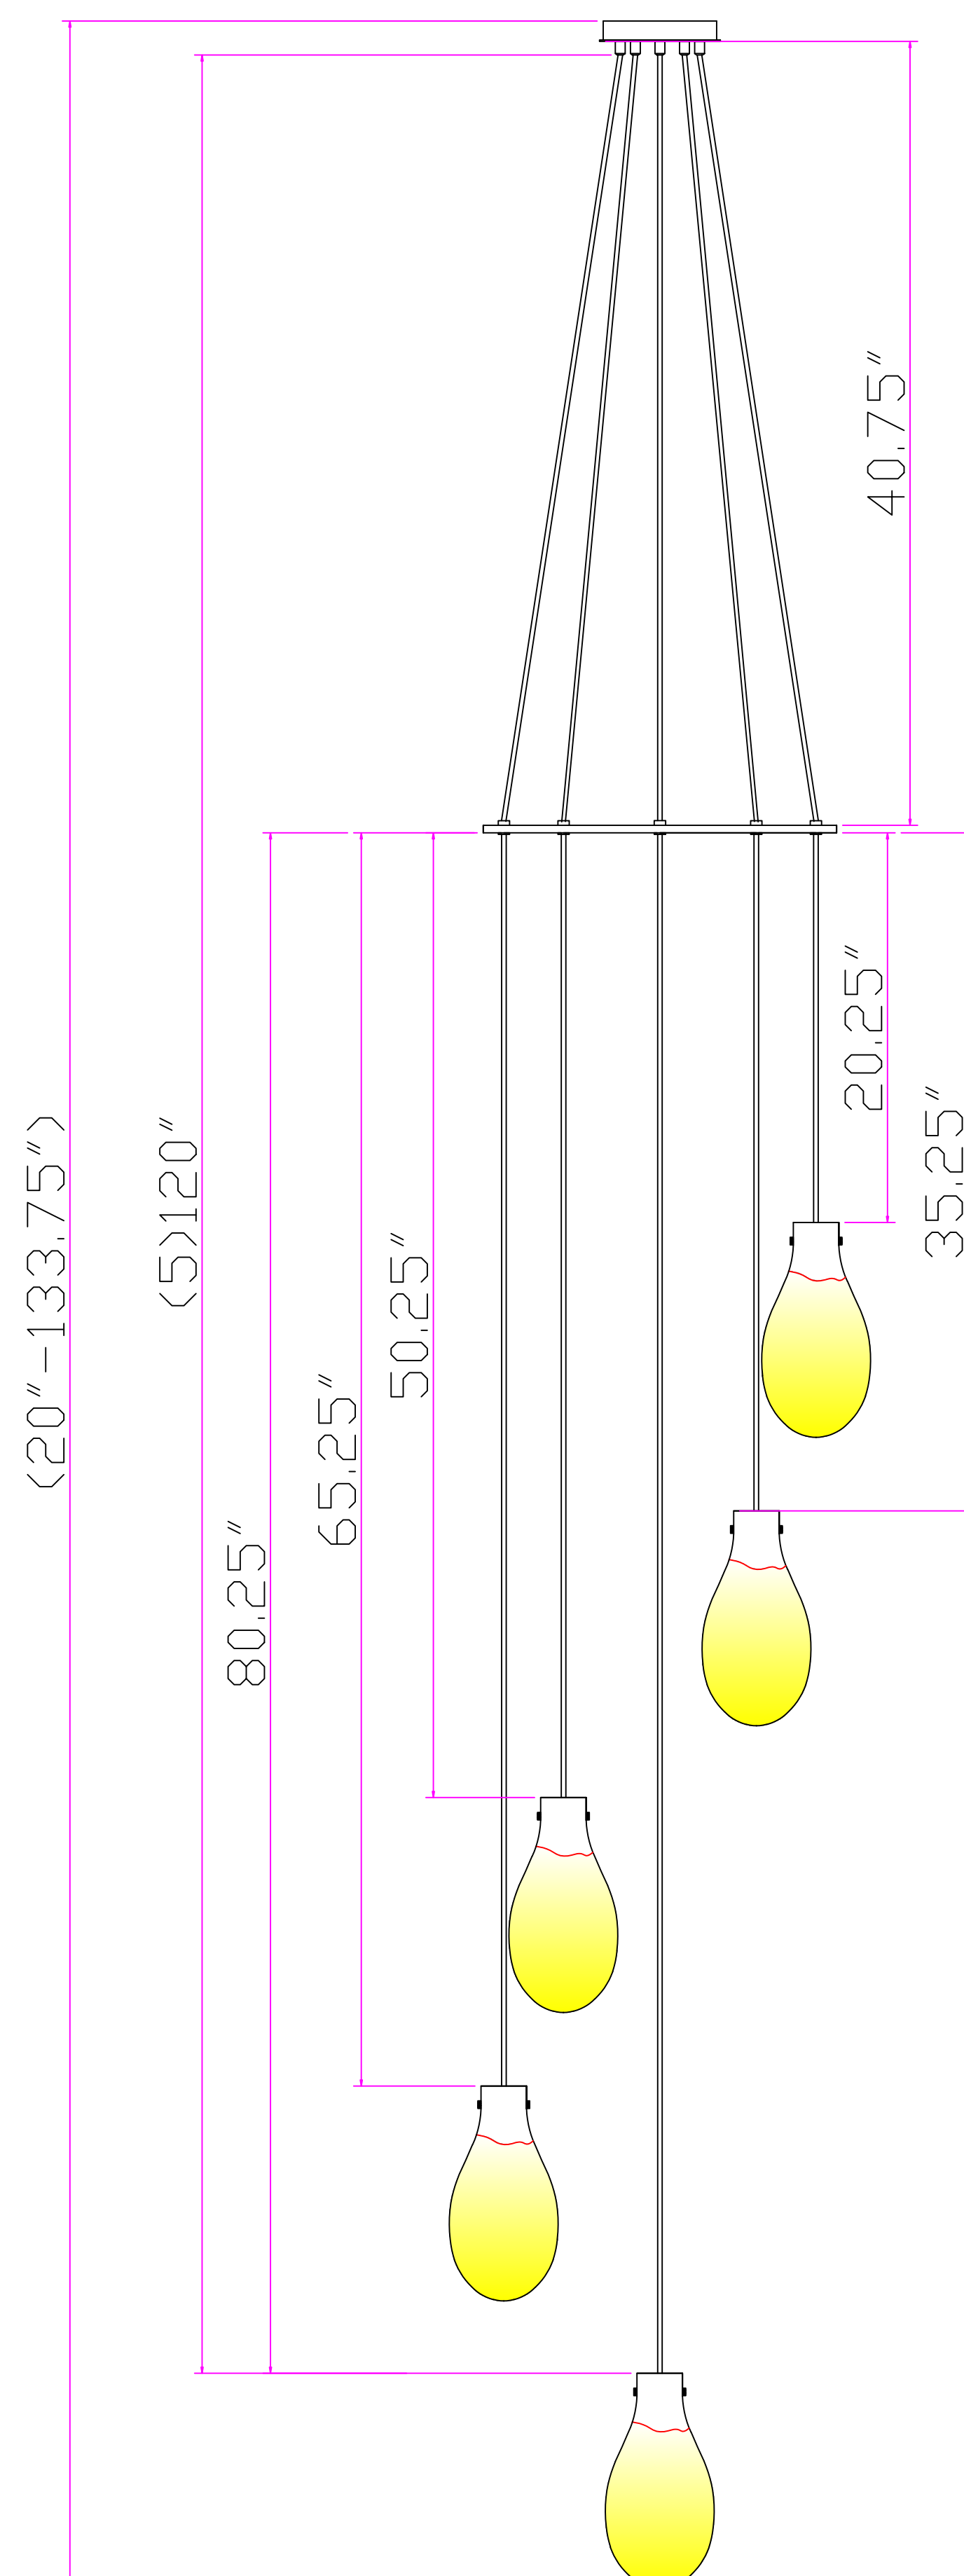

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



TYPE T10

Included need 5 - Med T10 LED Bulb
6 Watts Recommended
Use LED Bulbs for Extended Use
The Fixture is Damp Rated

How to install

1. All cords are pre-set to a fixed length. The height of each light head can be adjusted by loosening the set screws (marked: "H") located on the side of the nuts at both the canopy and the ring. Once the desired height is achieved, securely tighten the set screws using a screwdriver. Cut any excess cord inside the canopy. Do not remove the strain relief located at the end of the cord.
2. Attach the mounting plate to the outlet box using the two outlet box screws.
3. Raise the fixture frame to the ceiling and make the electrical connections. Once the wiring is complete, raise the canopy to cover the outlet box and secure it using the side screws.
4. Install the bulb into the socket (bulb included).
5. Slide the glass shade over the bulb and socket, then secure it to the socket using the cap nuts.
6. If the ring is not fully level, loosen the set screw "H" on the coupler above the ring to adjust the cords.



WARNING: Cutting the cord and rewiring must be performed by a qualified electrician to avoid electrical hazards.



WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA LIGHTING

ASSEMBLY INSTRUCTION MODEL# DAV-6005-MG



Crystorama.com

Part Number

- A. (1)-Mounting hardware;
- B. (1)-Mounting plate;
- C. (1)-Canopy; (XNO6005MGCAN6IN)
- D. (2)-Screw;8/32"X10MM;
- E. (5)-Bulb;T10X185mm,LED6W;(XNO6001BULB)
- F. (5)-Glass ;W5.75"XH11.25" ;(XNO6001GLA11.25IN)
- G. (15)-Cap nut;8/32"X15MM ;(XNO6001MGCAP)
- H. (10)-Plastic Screw;M6X5MM ;
- J. (1)-Metal Band;
- K. (5)-Strain;
- M. (5)-Davis Cord;(XNO6005CORD)
- N. (5)-DAVIS MG NUT FOR CANOPY WITH PLASTIC SCREWS;(XNO6005MGNUT)
- O.(1)Screwdriver(fof accessory);

